

DIAMOND Fiber Optic Equipments

INSPECTION EQUIPMENTS

GENERAL DESCRIPTION


This compact, light weight Inspection Microscope is convenient for inspecting ferrule and fiber endfaces in the field or the laboratory.

Its body fits comfortably in the hand and permits easy operation. The push button at the front wall operates a battery powered lamp for the integral illumination system.

Foldback rubber eyecup for eyeglass wearers, allows a tightfit and eliminates all reflections given by incident lights into the eye piece.

Universal adapter \varnothing 2.5 mm as well as soft case are included.

Other interchangeable connector specific adapters are available upon request.

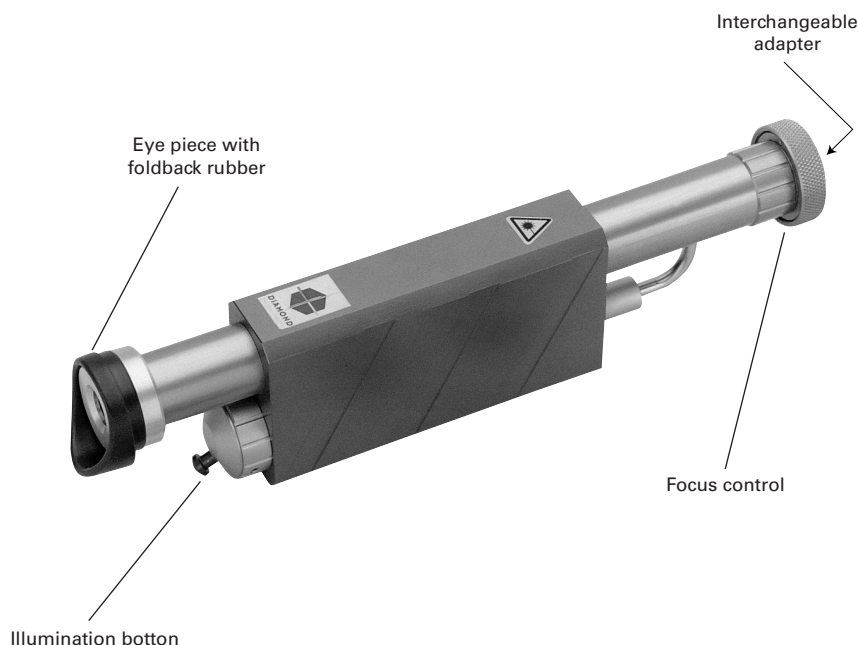

TECHNICAL DATA

| | |
|----------------|--|
| Magnification: | 300 x |
| Dimension: | ca. 300 x 75 x 40 mm (11.8 x 2.9 x 1.5 inches) |
| Weight: | 1 kg (2,1 lbs) |
| Batteries: | (2x) LR 14, 1.5 V |
| Lightbulbe: | 2,2 V 0,18 A |



DIAMOND SA • Via dei Patrizi 5 • CH-6616 Losone
Tel. +41 91 785 45 45 • Fax +41 91 785 45 00 • e-mail info@diamond-fo.com

www.diamond-fo.com

Inspection microscope



*Specifications subject to change
without notice*


BDD 1950053 125

ATTENTION This hand microscope shall be used only with Laser turned off.

WARNIG Laser light may damage your eyes.

ADVISE When Laser can not be turned off use Video Inspection Microscope (see picture).

For more information see specific data sheet.

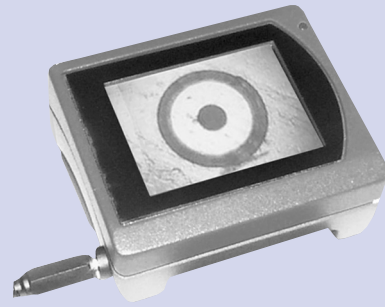


UNIVERSAL ADAPTERS

Ferrule diameter: \varnothing 3,175 mm
 \varnothing 3,5 mm
 \varnothing 1,25 mm

CONNECTOR SPECIFIC ADAPTERS

Connector types: E-2000™ PC & APC
 FC PC & APC
 LSA (DIN) PC & APC
 SC PC & APC
 ST™
 F-3000™ PC & APC
 MU PC & APC
 MFS PC & APC
 MPO PC & APC
 MT-RJ PC

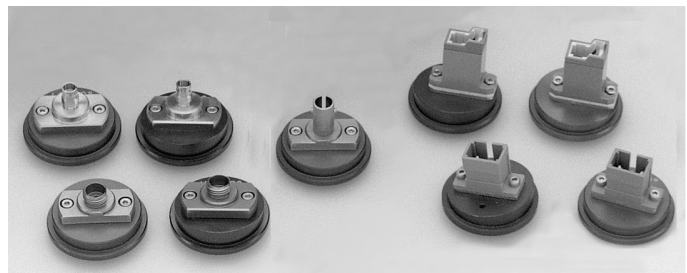

ORDER INFORMATION

To order the inspection microscope and options , please refer to the part numbers provided in the enclosed P/N list. (Universal adapters as well as connector specific adapters have to be ordered separately)